

User Manual of HD Video Output Sunglasses Camera

● Product Accessories

- Sunglasses camera
- USB cable
- Charger
- User manual CD
- a clip
- Glasses bag and cloth

● Picture & Buttons



1. Camera
2. Power on/off/Record
3. SD card Slot
4. MIC
5. USB interface
6. Reset
7. Indicator Light

● Technical Data

- 1) Main functions: recording video and audio simultaneously, Web camera, TV Video output, USB drive, sunglasses
- 2) Resolution: 5 million pixels
- 3) Video format: AVI, 1280*720
- 4) External memory: micro SD card 2GB-32GB, Max 32GB
- 5) USB: 2.0 (Hs)
- 6) Charging time: 2.5-3 hours
- 7) Battery use time: Polymer Li battery. can use 2 -3 hours continually
- 8) Operation systems: No need for driver installation if the operating system is

Windows ME/ 2000/ XP/ Vista or above (Windows98 is excepted)

- **Operation**

Before using this device please insert Micro SD card or TF card. When inserting the card, please let the side with metal of the card towards button.

Note:

Without insert TF card, the blue light will flash continuously after power on.

- **Power On**

Under power off mode, long press the Power on/Off /Record button for three seconds, Blue light will flash 5 times to enter to the recording mode. Under the recording working time, blue light will flash slowly. Short press the Power on/off/record button, then glasses stops recording and keeps the video automatically. If you want to record more, please repeat the above operations.

- **Switch Off**

Under standby mode, long press the power on / off /Record button, the blue light will be off, buzzer prompts on time at the same time. It proves that the camera have powered off.

Note: Device will keep to one file automatically after 10 minutes.

- **Reset**

Insert the clip into the RESET hole to restart slightly the device once it does not work normally under incorrect operations or other unknown reasons.

Note: Under recording video mode, if you shut down the camera by reset button, video files will not be saved.

- **Charging**

- ◆ Under standby mode, connect the camera to the computer via a USB cable, Red light keeps on, blue light will be flashing fast. Indicating the camera is charging, when blue light is off, the red light keeps on, it is fully charged;

- ◆ By charger that we distributed. The green light keeps on, indicate that the camera is charging, green light is off, it's full charged.

- ◆ The camera built-in high capacity lithium polymer battery with memory effect, so

the initial use of the first five times, please charge the battery after run out of power to active the battery maximum capacity and obtain standard working hours.

- **Web Camera**

Connect USB to computer without memory card, and then enter into webcam mode directly. (It needs to install STK03NU Driver first when first time use the function).

- **Playback**

Playback

Finishing recording video/ taking photo connect the camera to the computer with a USB data cable, red light keeps on, then long press power on/off/record button, red light keeps on, blue light is flashing fast. Click on removable disk, and select the video file you can double-click the computer to play. Please ensure that the relevant player software have been installed before connect sun glasses to computer. Double-click to see photos.

- **Setting Time**

The software has added the function that can show the time on the video and picture. Please operate it as follow;

Edit one file named "time" as the format "2011.12.12 12:12:12 Y", then copy the file to the root of the root disk of the camera.

The time system of the camera will be reset when the glasses started next time.

- **Note**

1. For saving power, under the standby mode, the device will power off automatically if no any operations within 20 seconds.
2. When it is recording, if power is low, the system will first save the video content first, then automatically shut down.
3. Under continuous recording, the system will automatically generate a new video file after every operation,.
4. Please keep the camera in brighter environment, to maintain the camera vertical and stable, and keep the review within a certain distance to obtain better effect.
5. The time of PC recognizing the device is different according to its different system

and configuration, so please not operate during recognizing. If the device can't be recognized, please check your computer's operation system, device drivers, USB port and the USB cable is normal, and then connect the hardware again.

6. Remember that when you tap with the paper clip to reset, Please slightly to avoid damage other components.