

SNO[®]
KOREA TECHNOLOGY
SMART SPEAKER WITH
360° CAMERA



Quick Manual for Android and iOS

Precautions

- Please confirm whether the voltage meets the requirements before using the product, or improper voltage will damage the device and bring security risk.
- Please install the device correctly and make sure whether to disconnect the power supply at the time of installation.
- The device will generate heat in the work, please avoid using in confined spaces.
- In order to prevent burns, do not touch the device after prolonged use.
- Please use the camera function legally.

Interface

Before use ,please pay attention to the interface and button of camera.

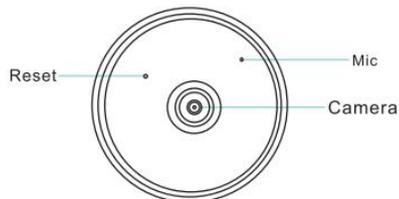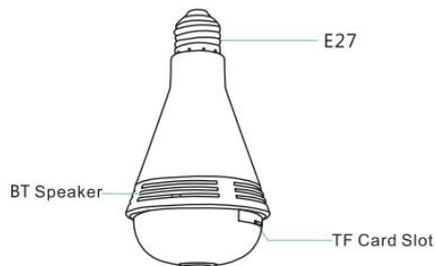

Operation

1.Download APP

Tips one:Scan QR code.




iCSee

Tips two :Search "iCSee" in the App store or Googleplay and download.

2.Installation

Connect the camera to the power outlet .Screw the bulb into the lamps and turn on the power switch. When the indicator light is red, indicating that the camera power is switched on.

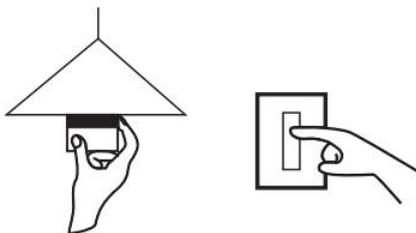


 At present, the camera supports 802.11 b/g/n protocol 2.4 g WiFi, 5 g WiFi is not supported. Please make sure that is through 2.4 G connection between mobile phones and the router.

3.Camera configuration

 Configure the network in the process of bilingual voice prompt (Chinese and English) , please note.

01.open the app "iCSee",choose the "login" (picture1) (If you don't have user name, please register first).


02.After Click "+" (picture 2).

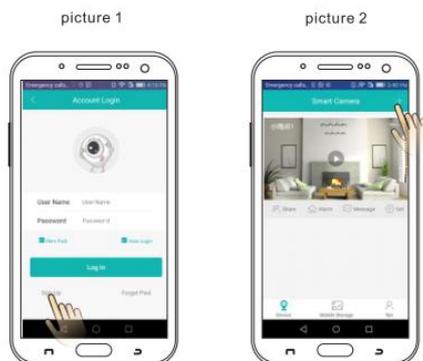

04. After you hear a camera voice "connect successfully", will enter to "set pwd" Then confirm (picture 5).

05. After "confirm" will enter to "pick a name" (picture 6).

03. Enter to "Add device" (picture 3), please input WiFi router password (picture 4), Then confirm.

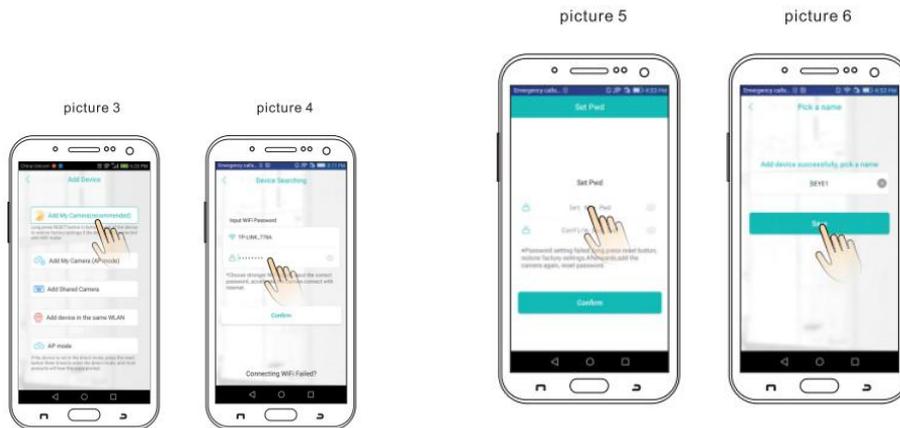

06. After click "save" will enter to video preview (picture 7).


07. Click the "⚙️" (picture 7) will enter to (picture 8), you can custom setting about the switch, adjust brightness and video model.

★Play music

Smart speaker with 360° camera, connect with BT, can play all kinds of popular music songs, training audio, children's stories and so on all kinds of audio books.

Matching method is as follows:

Open the phone "Settings" - "BT" - choose "BT camera" BT name (picture 9), when the camera after a gentle sound, BT and bulbs built-in speaker connection is successful.

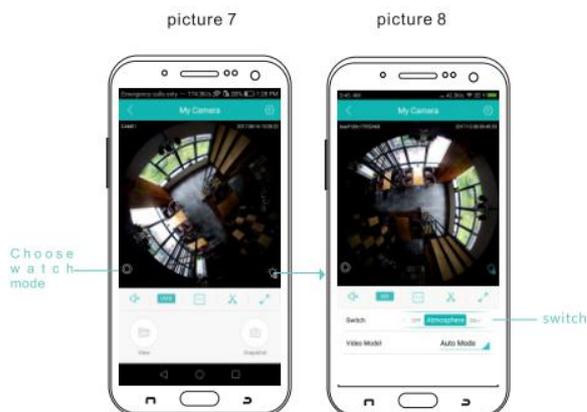

★ AP mode and Routing mode configuration

Note: AP mode and Routing mode can switch to each other.

● **AP Mode:** Please press the reset button (SET) 3 times, camera emitted a WiFi hotspot named "camera_xxxx", the mobile phone connect to this hotspot (password is: 1234567890). Then Open App "iCSee", choose the "AP direct connection" (picture 3).

● **Routing mode:** LAN access in AP mode, open the camera Settings interface, click the "network Settings" to switch to the routing mode (picture 10), and then, according to the APP interface tips, for network configuration.



Experience Version APP

● "iCSee experience version" APP is suitable for enthusiasts and fans to experience and test our products ahead of time, and can participate in our product's improvement and renewal plan. When the product adds new features and has significant updates, you can give priority to download the experience version.



● In order to thank the fans for their love, anyone who is actively participating in the "iCSee experience version" can have the chance to get the test prototype for free, and have the opportunity to participate in various kinds of lottery draw. For those who make great contributions will receive additional special awards from our company.

★ FAQ

Q: How to store a video camera?

A: Currently, the camera supports FAT32G format Class6, Class10 TF Card, max supports 128GB. When the TF Card is full, it will delete earlier video automatically and loop recording.

Q: The camera be offline, how to do?

A: Check the power and WiFi.
Restart the camera.
Reconfigure the camera.
Check the home broadband network.

Q: How to switch network environment?

A: When using in the new network environment, please long press the reset button (SET) for 6~8 seconds release the button. It means that restored to factory setting successfully. Then you can start to connect network configuration again.

Directions

App and device firmware will have new update irregularly, you could upgrade it online at app setting, instructions are for reference only.

Notice

While using this product, please modify the user password, to avoid the delinquents misappropriation.

Do not install the equipment in damp, dusty, children easy access to the venue.

Please allow within the scope of use and storage of temperature and humidity, do not disassemble it at will.

Warranty Card

Product Name		Model	
Purchase Date		Purchase Store	
Cause			
Process			
Customer Name		Customer Gender	
Customer Phone		ZIP	
Address			

Warranty period:one year.

This warranty card is only for our company's products.