

Packing list

After open packing list box ,please check product body and accessories as blow:

 


PANORAMIC UFO CAMERA

Quick Manual for Android and iOS



Camera×1




Accessories kit ×1



Power adapter×1



 
3M Traceless glue×1



positioning paper×1

Interface

Before use ,please pay attention to the interface and button of camera.

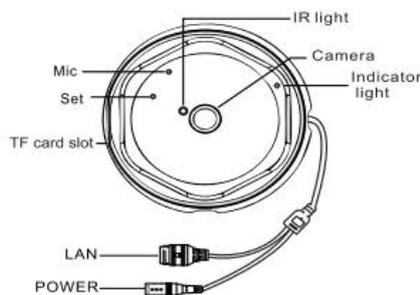

Operation

1.Download APP

Tips one:Scan QR code.



Android




iOS

Tips two :Search "iCSee" in the App store or Googleplay and download.

2 Power on

Connect the camera to the power outlet .When the indicator light is red, indicating that the camera power is switched on.

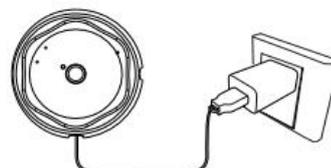

3.Camera configuration


1.Wireless network configuration :

01.open the app "iCSee",choose the "login" (picture1)
(If you don't have user name, please register first).

02.After Click "+" (picture 2).

03.Enter to "Add device "(picture 3),please input WiFi
router password (picture 4),Then confirm .

Picture 1

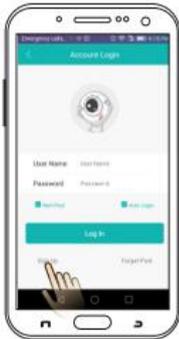

Picture 2



Picture 3



Picture 4



04.After you hear a camera voice "connect successfully",will enter to "set pwd"Then confirm(picture 5).

06.After click "save " will enter to video preview(picture 7).

05.After "confirm "will enter to "pick a name"(picture 6).

Picture 5



Picture 6



Picture 7



Choose
watch
mode

2. Wired network configuration:

- After login successfully, click "+" in the upper right corner, and select the third way "Add device in the same WLAN" (picture8);
- Enter into "Device Searching" interface, click "xmjp_ufo_****" (picture 9);The camera will be shown online, which indicates that the wired network configuration of camera is complete.
- Click to enter the view interface, and you can do related operations and settings.



FAQ

Q: How to store a video camera?
 A: Currently, the camera supports FAT32G format Class6, Class10 TF Card, max supports 128G. When the TF Card is full, it will delete earlier video automatically and loop recording.

Q: The camera be offline, how to do?
 A: Check the power and WiFi.
 Restart power on and restart the camera.
 Reconfigure the camera.
 Check the home broadband network.

Q: How to switch network environment?
 A: When using in the new network environment, please long press the reset button (SET) for 6 seconds release the button .It means that restored to factory setting successfully. Then you can start to connect network configuration again.

⚠ Notice

While using this product, please modify the user password, to avoid the delinquents misappropriation.

Do not install the equipment in damp, dusty, children easy access to the venue.

Please allow within the scope of use and storage of temperature and humidity, do not disassemble it at will.

⚠ Directions

App and device firmware will have new update irregularly,you could upgrade it online at app setting,instructions are for reference only.

Warranty Card

| | | | |
|----------------|--|-----------------|--|
| Product Name | | Model | |
| Purchase Date | | Purchase Store | |
| Cause | | | |
| Process | | | |
| Customer Name | | Customer Gender | |
| Customer Phone | | ZIP | |
| Address | | | |

Warranty period:one year.
 This warranty card is only for our company's products.