


SNO[®]
KOREA TECHNOLOGY
SMART VIDEO DOORBELL

User Manual

Packing list

After opening it, please check whether the product is in good condition or not; confirm whether the accessories are complete as below.

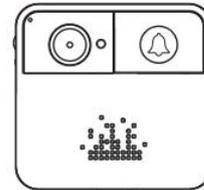

S1

Fittings:




Screws
Package X1



Hex
wrenchX1



Wooden
Screw X2

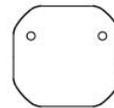


Damping padX1




B1 X1
(Optional)

Appearance introduction

Before use, please be familiar with the interface and button of the doorbell.

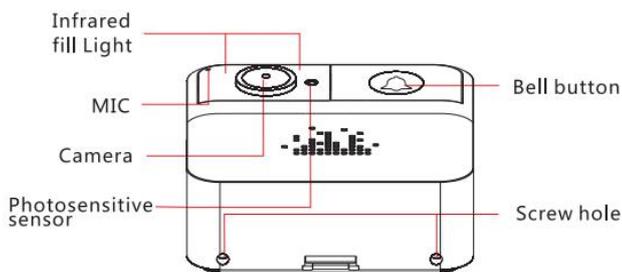

Front

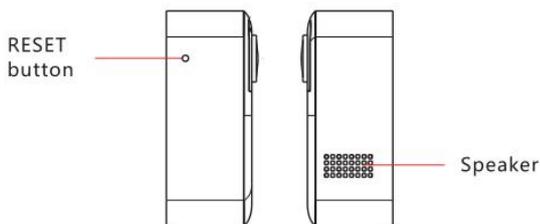

Back

Notes: Long-press the RESET button for 5 seconds, loosen it when hear the voice prompt "restore factory settings, please don't power off". Then it can be restored to the factory default configuration.

Operation manual

1.Device ready

First step: Install the backplane where you need to install the doorbell. (Expansion screws need to be used on cement and stone walls, wood screws or 3M glue can be used on wooden walls.)

Second step: Install the doorbell body into the backplane.

Third step: Use allen wrench to fix screw.

2.Download APP



iCSee

Tips one: Scan QR code to download;

Tips two: Search and download "iCSee" in the Appstore or Googleplay;

3.Device network configuration

01. User login

- Open "iCSee" , sign up a new account and log in(Figure1) ;
- If you have Wechat ,You can use" WeChat shortcut login" directly (Figure1) ;




Click "sign up" and input the corresponding information.

Click the "WeChat" icon to set "WeChat shortcut login".

(Figure 1)

02.Device preparation

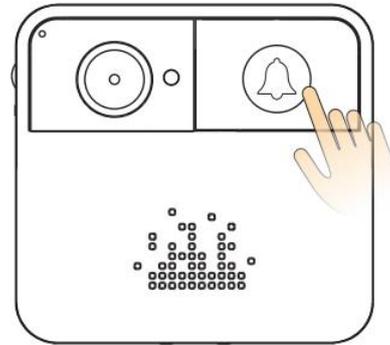

(Figure 2)

Notes: There is voice instruction throughout the process of device configuration. After hearing the voice prompt "wait to be configured", you can start configuring the device.

03.Add device

- After login successfully, click "Add My Camera" (Figure 3), input "WiFi password" (Figure 4). Finish the network configuration of the camera according to the APP operation hint.



(Figure 3)



Click to check if the WiFi password is right

(Figure 4)

- ① Add My Camera (recommended): Connect the device to the router.
- ② Add My Camera (AP mode): Connect the device to the router via AP mode.
- ③ Add Shared Camera: Add a device that others share to you. Add the camera via inputting the device serial number or sharing information code or scanning device QR code.

- ④ Add device in the same WLAN: When the device and your smart phone have been connected to the same router, you can use this way to add the camera.
- ⑤ AP hotspot stand-alone mode: The device can also can view real-time video, which does not need to connect to the external network.

Notes: This device does not support the AP mode and the AP hotspot stand-alone mode.

Notes: If the configuration fails, reset the device.

04.Access device

After logging success, you can use the mobile phone access the device through the APP, The device has the following states:



Device low battery or network failure;

Offline



Deep dormancy

In this state, the device does not support the remote wake-up function (or the device is set up to prohibit remote wake-up). If the mobile phone wants to view the device, it can be forced to wake up by manually pressing the device button.



Dormancy

The device is in a low-power mode and can be wake-up remotely by mobile phone.



Awaking

This state indicates that the device is waking up from the rest state to the online state. It will take about 3 seconds. If the network is not good, the time may be longer.



Online

In this state, The mobile phone can make various accesses to the device;

05.Message push

When a visitor presses a button or an alarm is generated, the device sends a message to the phone. You can receive the message in the following two ways:

1.Receive the message via the APP



Set up in the device use APP notification message.



Confirm the current account.

2.Receive the message via WeChat.



Log in APP with WeChat



Set up in the device use Wechat notification message.



Search in WeChat and flow the "ICSEE" official Account.

Notes : If the Mobile phone is set up to power saving mode, such as screen off & network off, it will not receive the message in time, Since android phones do not agree on the default handling of message interceptions, it is recommended to use WeChat receive message except the iPhone and Huawei phones.

Notes: when using the mobile APP to receive messages, the device will only send the message to the account with the contact rights. Please ensure that the existing account has been assigned to the contact (There is no such limit if you use WeChat to receive the message).

06.B1 Bell Device Configuration


B1 bell can make the doorbell ring in the room accurately , sound is soft without disturbing the people , and there are 35 songs can be used as toys for children

1.B1 bell setting

RESET button



First step: Short-press the RESET button of the Bell Device 3 times.

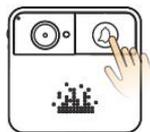

Second step: Short-press the bell button of the Video Doorbell; if the bell is ringing at the same time, the configuration is successful.

2.select doorbell ring

When you press the RESET key of B1 bell for a short time, it will switch another ring.

3.select volume

The volume is divided into 3 files. When you press the RESET key of B1 bell for two seconds, it will reduce the volume to a lower one. When the Minimum volume is reached,it will return to the highest volume if it continues to reduce.

FAQ

Q: How does the device store video?

A: The video doorbell supports 32GB maximum TF card, which will automatically loop recording when it's fulfilled.

Q: How to fix the problem of device offline?

- A: ● Check whether the device electricity is exhausted.
- Reconfigure the device.
- Check if the home network broadband is normal.

Q: How to switch the network environment?

A: When used in a new network environment, please long-press the RESET button for 3~5 seconds, loosen it when hear the voice prompt "restore factory settings, please don't power off". After reset successfully, configure the network again.

Warranty Card

Q: Why does the device do not respond when press the RESET button after startup?

A: After pressing the button, you will hear the voice prompts, press the reset button and hold it for about 5 seconds.

Notice

While using this product, please modify the user password.
Do not install the device in damp, dusty, children easy access to the venue.

Please place it under the specified condition of temperature and humidity, do not disassemble it at all.

Directions

App and device firmware will have new update irregularly, you could upgrade it online at app setting, instructions are for reference only.

Product Name		Model	
Purchase Date		Purchase Store	
Cause			
Process			
Customer Name		Customer Gender	
Customer Phone		ZIP	
Address			

Warranty period:one year.
This warranty card is only for our company's products.